

OPERATING and MAINTENANCE INSTRUCTIONS

Models: HJ-531-10-240 and HJ-531-13-180

JETSTREAM HEATED DISH DOLLY

ELECTRICAL SPECIFICATIONS:

MODEL NO.	Volts	Watts	Amps	Hertz	Phase	Service
HJ-531-10-240 HJ-531-13-180	120	1000	8.4	60	1	AC
HJ-531-10-240-240 HJ-531-13-180-240	240	1000	4.2	60	1	AC

HOW TO INSTALL UNIT:

1. Plug cord into receptacle in back of unit.
2. Turn clockwise to lock.
3. Plug other end into 15 Amp wall outlet.

HOW TO START UNIT:



1. Flip switch ON. Yellow light will come on.
2. Turn thermostat to #7 (150° F to 160° F / 66° C to 71° C) which will warm the plates.
3. **Hint:** Dial has a range of #1 to #10 (60° F to 250° F / 16° C to 121° C).
4. Pre-heat dolly for 30 minutes.
5. Add plates.

HOW TO TURN UNIT OFF:

Flip switch OFF.



MAINTENANCE:

	WARNING	
RISK OF FIRE OR ELECTRIC SHOCK DO NOT OPEN		
WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY		

REPLACEMENT PARTS

Description	120 Volt	240 Volt
Heater Ass'y	0811-074	0811-074-01
Blower Kit	0769-005-K	0769-006-K1
Thermostat Kit	0848-062-K	0848-062-K
Yellow Light	0766-048	0766-045
Red Light	0766-047	0766-046
Receptacle	0713-011	0713-012
Cord Set	0810-031-01	0810-032-01
Switch	0808-011	0808-020

Heated Dish Dolly	FL-0508
Rev. 21 (6/09)	Page 2 of 2

OPERATING and MAINTENANCE INSTRUCTIONS

Models: HJ-531-10-240 and HJ-531-13-180

JETSTREAM HEATED DISH DOLLY

TROUBLE-SHOOTING:

Failure	Cause
1. Yellow light not on.	1a. Cord not plugged into dolly or wall outlet. 1b. Circuit breaker/fuse to wall outlet blown. 1c. Switch is off.
2. Unit does not get hot.	2a. Thermostat set too low.
3. Unit gets too hot or won't shut off.	3a. Defective electrical parts; unplug cord from wall outlet.

If the cause is none of the above, refer to our list of Authorized Service Centers, FL-1400.

WARNING

BEFORE CLEANING CABINET:

1. Remove Power Cord from cabinet.
2. Do NOT hose cabinet with water.
3. Do NOT get water on controls.
4. Do NOT use abrasives or harsh chemicals.

Cleaning Hints:

1. Wipe up spills as soon as possible.
2. Clean regularly to avoid heavy dirt build-up.
3. Make a test spot with cleaner.
4. Follow manufacturer's directions on cleaner.
5. Do not mix cleaners.
6. Avoid drips and splashes.

	SOIL	CLEANER	METHOD
Dolly	DIRT	Mild detergent* and hot water, or mild abrasive cleaner.	1. Use soft, damp cloth. 2. Rinse with hot water. 3. Wipe dry.
		Steam (no strong alkaline additive)	1. Rinse after steam cleaning. 2. Wipe dry.
Inside and Outside <i>(Aluminum)</i>	FINGERPRINTS, GREASE OIL	Detergent* and hot water.	1. Wipe with soft, damp cloth. 2. Rinse with hot water. 3. Wipe dry.
		Mild abrasive cleaner. Oily or waxy cleaner.	Apply with soft, clean cloth.
	WATER SPOTS	Mild abrasive cleaner.	Wipe with damp cloth.

* Mild detergents include soaps and non-abrasive cleaners

LEGEND

SW	SWITCH (SPST)
BM	BLOWER MOTOR
TH	THERMOSTAT
H	HEATER
A	AMBER PILOT LIGHT
R	RED PILOT LIGHT
L5-15R	RECEPTACLE, 110V/15A
L6-15R	RECEPTACLE, 220V/15A

ELECTRICAL SPEC

120/240V 1000W
1 PHASE 60 HZ
AC SERVICE

