

OPERATING and MAINTENANCE INSTRUCTIONS

Models: H137PUA...C/H138P1834C and H137PSUA...C/H138PS1834C


PASS-THROUGH SERIES HOT CABINETS

ELECTRICAL SPECIFICATIONS:

Model No.	Volts	Watts	Amps	Hertz	Phase	NEMA
H137PSUA12C H137PUA12C H137PSUA9C H137PUA9C H137PSUA6C H137PUA6C H138PS1834C H138P1834C	125	2000	16.0	60	1	5-20P
H137PSUA12C208 H137PUA12C208 H137PSUA9C208 H137PUA9C208 H137PSUA6C208 H137PUA6C208 H138PS1834C208 H138P1834C208	208	2000	10.0	60	1	6-15P
H137PSUA12C240 H137PUA12C240 H137PSUA9C240 H137PUA9C240 H137PSUA6C240 H137PUA6C240 H138PS1834C240 H138P1834C240	240	2000	8.6	60	1	6-15P

NOTE: The above model numbers are basic models.

They may be followed by letters: **L**, **M**, **2M**, **D** or ending with **S** and/or **Z**.

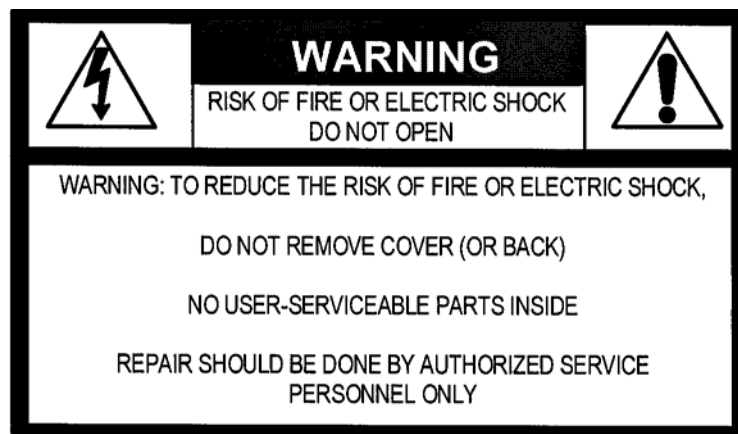


OPERATING and MAINTENANCE INSTRUCTIONS

Models: H137PUA...C/H138P1834C and H137PSUA...C/H138PS1834C

PASS-THROUGH SERIES HOT CABINETS

TO INSTALL UNIT:

1. Place cabinet on level floor.
2. Plug cord end into proper wall outlet.

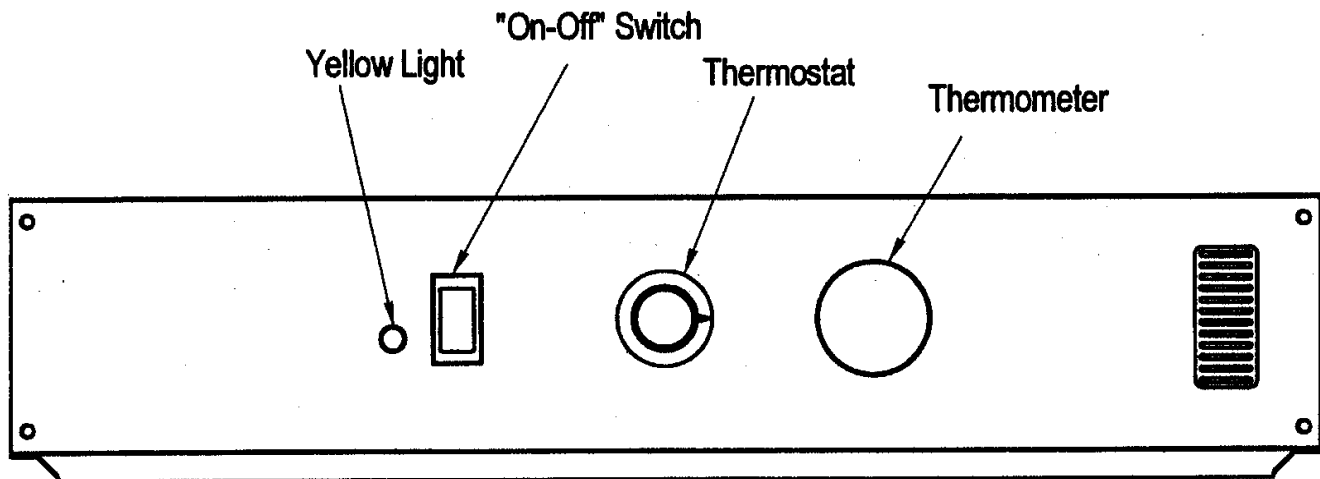

HOW TO START THE UNIT:

1. Turn the POWER switch on.
 2. The *yellow* light will turn on.
 3. Turn thermostat to #7.
 4. Preheat cabinet for 60 minutes.
 5. Put food into cabinet.
 6. Turn thermostat to #8 and close door.
No. 8 setting = approx. 185°F (85°C)
No. 6 setting = approx. 160°F (71°C)
No. 4 setting = approx. 130°F (54°C)
- Proper food holding temperature is 140°F/60°C or higher.

NOTE: The optional digital thermometer display flashes when center of cabinet is below 140° F (60° C) or above 250° F (121° C). Call the factory if you need different settings.

TO TURN OFF UNIT:

Push the POWER switch off.
The *yellow* light will go out.



5925 Heisley Road • Mentor, OH 44060-1833
 877/CRES COR (273-7267) • 440/350-1100
 Fax: 440/350-7267 • www.crescor.com

Pass-thru Hot Cabinet	FL-2254
Rev. 6 (7/06)	Page 3 of 5

OPERATING and MAINTENANCE INSTRUCTIONS

Models: H137PUA...C/H138P1834C and H137PSUA...C/H138PS1834C

PASS-THROUGH SERIES HOT CABINETS

▲WARNING

BEFORE Cleaning the Cabinet:

1. Allow cabinet to cool.
2. Do NOT use abrasives or harsh chemicals.

Is your cabinet of aluminum or stainless steel construction? Be sure your cleaner is suitable for that material. **NOTE: Stainless steel cabinets have "S" in the model number.**

Cleaning Notes:

1. Wipe up spills as soon as possible.
2. Clean cabinet regularly to avoid heavy dirt build-up.
3. Make a test spot with cleaner.
4. Follow manufacturer's directions on cleaner.
5. Do not mix cleaners
6. Avoid drips and splashes.

HOW TO CLEAN UNIT:

SOIL	CLEANER	METHOD
DIRT	Mild detergent* and hot water, or mild abrasive cleaner.	1. Use soft, damp cloth. 2. Rinse with hot water. 3. Wipe dry.
	Steam (no strong alkaline additive).	1. Rinse after steam cleaning. 2. Wipe dry.
FINGERPRINTS, GREASE and OIL	Chemical oven cleaner	Follow Oven cleaner manufacturer's directions
	Mild abrasive cleaner; Oily or waxy cleaner.	Apply with soft, clean cloth.
WATER SPOTS	Mild abrasive cleaner.	1. Apply with damp cloth. 2. Rinse and dry.

**Mild detergents include soaps and non-abrasive cleaners.*

TROUBLE-SHOOTING CHART:

FAILURE

1. Yellow light at switch does NOT light.
2. Unit does not heat.
3. Unit gets too hot or won't shut off.
4. Blower does not work or makes noise.

POSSIBLE CAUSE

- 1a. Circuit breaker/fuse to wall outlet blown.
- 1b. Cord unplugged from wall outlet.
- 1c. Switch is "OFF".
- 2a. Thermostat set too low or is "OFF".
- 2b. Switch is "OFF".
- 3a. Defective electrical parts. **UNPLUG UNIT FROM WALL OUTLET.**
- 4a. Defective blower.

If cause is none of the above, refer to our list of Authorized Service Centers, FL-1400



5925 Heisley Road • Mentor, OH 44060-1833
 877/CRES COR (273-7267) • 440/350-1100
 Fax: 440/350-7267 • www.crescor.com

Pass-thru Hot Cabinet	FL-2254
Rev. 6 (7/06)	Page 4 of 5

OPERATING and MAINTENANCE INSTRUCTIONS

**Models: H137PUA...C/H138P1834C and H137PSUA...C/H138PS1834C
PASS-THROUGH SERIES HOT CABINETS**

REPLACEMENT PARTS:

DESCRIPTION	120 Volt	208 Volt	240 Volt
Power Unit	2000w 0675-004	0675-005	0675-005
	200w + digital therm 0675-004-D	0675-005-D	0675-005-D
Heater kit, air	-200w 0811-074		0811-074-01
	(2-1000w)		
High Limit	0848-060	0848-060	0848-060
Thermometer	-analog 5238-030	5238-030	5238-030
	-digital 5238-034	5238-034	5238-034
Transformer (<i>used with digital thermometer</i>)	0769-159	0769-159	0769-159
Thermostat, air	-analog 0848-062-K	0848-062-K	0848-062-K
	-solid state 0848-008-ACK	0848-008-ACK	0848-008-ACK
Power Cord	-200w 0810-065-10	0810-039-02	0810-039-02
Power Switch	0808-116	0808-116	0808-116
Power Light	0766-094	0766-095	0766-095
Vent fan	0769-165	0769-174	0769-174
Blower Kit	0769-005-K	0769-006-K1	0769-006-K1
Door, complete	-aluminum UA12/UA6/1834	1221-524	
	-aluminum UA9	1221-527	
	-stainless steel UA12/UA6/1834	1221-525	
	-stainless steel UA9	1221-526	
Door, gasket	-aluminum UA12/UA6/1834	0861-235	
	-aluminum UA9	0861-236	
	-stainless steel UA12/UA6/1834	0861-185	
	-stainless steel UA9	0861-182	
Door, hinge	-aluminum	0519-087-K	
	-stainless steel	0519-074-K	

OPERATING and MAINTENANCE INSTRUCTIONS

Models: H137PUA...C/H138P1834C and H137PSUA...C/H138PS1834C

PASS-THROUGH SERIES HOT CABINETS

